

# INSTRUCTION MANUAL



## OPERATING AND INSTALLATION

### DT10RF OPTIMISING PROGRAMMER

**DIGISTAT OPTIMISER** - Radio frequency controlled programmable room thermostat with domestic hot water programmer

FOR GREENSTAR CDi AND GREENSTAR Si MODELS

ALSO GREENSTAR i SYSTEM AND GREENSTAR CDi SYSTEM MODELS  
(ONLY WHEN USED WITH THE OPTIONAL INTEGRAL DIVERTER VALVE)

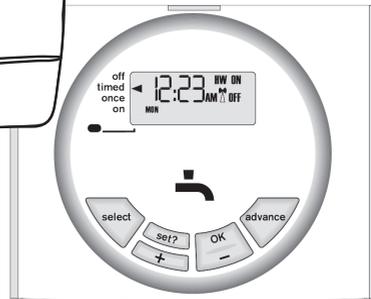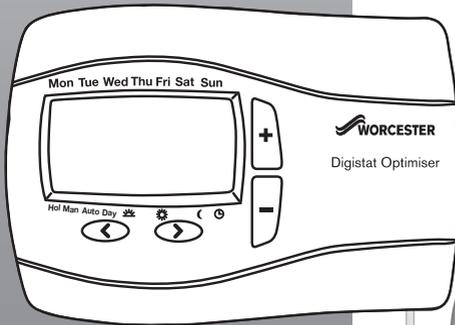

UK/IE

## WORCESTER, BOSCH GROUP:

TECHNICAL	08705 266241
SERVICE	08457 256206
SPARES	01905 752571
LITERATURE	01905 752556
TRAINING	01905 752526
SALES	01905 752640
WEBSITE	worcester-bosch.co.uk

## SYMBOLS



Domestic Hot Water



Radio Frequency (RF) Transmitter

## PROTECT YOUR ENVIRONMENT



### PROPER BATTERY RECYCLING

Electronic devices and batteries, rechargeable or not, should not be disposed of into ordinary household waste. Instead, they must be recycled properly to protect the environment and cut down the waste of precious resources. Your local waste management authority can supply details concerning the proper disposal of batteries.

## PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE STARTING

THESE INSTRUCTIONS ARE APPLICABLE TO THE WORCESTER BOSCH MODEL(S) STATED ON THE FRONT COVER OF THIS MANUAL ONLY AND MUST NOT BE USED WITH ANY OTHER MAKE OR MODEL

THESE INSTRUCTIONS APPLY IN THE UK ONLY AND SHOULD BE FOLLOWED EXCEPT FOR ANY STATUTORY OBLIGATION

IF YOU ARE IN ANY DOUBT CONTACT WORCESTER BOSCH TECHNICAL HELPLINE

THIS ACCESSORY MUST BE FITTED BY A COMPETENT PERSON. FAILURE TO COMPLY COULD LEAD TO PROSECUTION.

LEAVE THESE INSTRUCTIONS WITH THE USER OR AT THE APPLIANCE.

## ABBREVIATIONS

CH	=	Central Heating
DHW	=	Domestic Hot Water
RF	=	Radio Frequency
DLS	=	Daylight Saving
BST	=	British Summer Time
GMT	=	Greenwich Mean Time
C	=	Celsius (Centigrade)
IP	=	Ingress Protection
V	=	Volt
m	=	metre
mA	=	milliAmpere

## DEFINITIONS (DLS/BST)

Summer time begins: Last Sunday in March at 1:00 am GMT (Clocks are put forward by 1 hour)

Summer time ends: Last Sunday in October at 2:00 am BST (Clocks are put back by 1 hour)

TECHNICAL DATA .....2

DIGISTAT TRANSMITTER .....3

    GENERAL INFORMATION .....3

    PROGRAMMABLE THERMOSTATS .....3

    DIGISTAT OPERATING CONTROLS .....4

    PRE-PROGRAMMED SETTINGS .....5

    ADJUSTING TIME AND TEMPERATURE .....6

    DIGISTAT / USER OPTIONS .....9

RECEIVER .....16

    OPERATING CONTROLS .....16

    PRE-SET PROGRAMS .....18

    PROGRAMMABLE SETTINGS .....19

    RECEIVER INSTALLATION .....25

DIGISTAT INSTALLATION .....25

    SETTING UP THE RF LINK .....26

    CANCEL SIGNAL STRENGTH MODE .....28

    MOUNTING THE DIGISTAT .....28

    CHECK PREVIOUSLY INSTALLED UNITS .....29

    DIGISTAT / INSTALLER OPTIONS .....31

    BATTERY CHANGE .....33

    MAINTENANCE .....33

## TECHNICAL DATA

DESCRIPTION	UNITS	DT10RF Receiver	Digistat Transmitter
Dimensions	mm	--	137 x 96.5 x 31.3
Electrical supply	V	24	3
Radio frequency	MHz	433	433
Radio signal range	<p>The range may be affected by the composition / density and number of walls between the Digistat RF and receiver.</p> <p>30 metres typically, through two internal plasterboard walls and a ceiling.</p> <p>26 metres typically, through three internal plasterboard walls and a ceiling.</p> <p>17 metres typically, through two internal plasterboard walls a ceiling and one external cavity wall.</p> <p>These distances are provided for guidance only, many factors can affect the range of the transmitter, including metal pipework, appliances and even furniture.</p>		
Temperature range	°C	5 to 32	5 to 32
Ambient operating temperature	°C	0 to +50	0 to +40
Ambient storage temperature	°C	--	-20 to +55
Humidity operating range	% non condensing up to 45°C	30 to 95	25 to 90
Class of operation		II	II
Degrees of protection	IP	24	30
Accuracy at 25°C	sec/day	better than ±1	--
Battery life (with alkaline batteries)	years	N/A	approx. 2
Battery back up time and date	years min.	10	10
Shortest switching period	minutes	1	1
Hot water pre-heat settings	number	3 ON / 3 OFF	--
Central heating settings	number	--	6
Hot water and Central heating programs	days	7	7

### EC Directives:

European Union Law Directive 2000/84/EC  
 Low Voltage Directive (2006/95/EC)  
 Electro-Magnetic Compatibility Directive (89/336/EEC)  
 EC Marking Directive (93/68/EEC)

### STANDARD PACKAGE:

Programmable / RF receiver  
 Remote RF transmitter  
 Screws (x2)  
 Wall Plugs (x2)  
 Instructions  
 Batteries (x2) AA Alkaline

### What is a programmable room thermostat?

A programmable room thermostat is both a programmer and a room thermostat. A programmer allows you to set 'On' and 'Off' time periods to suit your own lifestyle.

A room thermostat works by sensing the air temperature, switching on the heating when the air temperature falls below the thermostat setting, and switching it off once this set temperature has been reached.

So, a programmable room thermostat lets you choose what times you want the heating to be on, and what temperature it should reach while it is on. It will allow you to select different temperatures in your home at different times of the day (and days of the week) to meet your particular needs.

Turning a programmable room thermostat to a higher setting will not make the room heat up any faster. How quickly the room heats up depends on the design of the heating system, for example, the size of boiler and radiators.

Neither does the setting affect how quickly the room cools down.

Turning a programmable room thermostat to a lower setting will result in the room being controlled at a lower temperature, and saves energy.

The way to set and use your programmable room thermostat is to find the lowest temperature settings that you are comfortable with at the different times you have chosen, and then leave it alone to do its job.

The best way to do this is to set low temperatures first, say 18°C, and then turn them up by one degree each day until you are comfortable with the temperatures.

You won't have to adjust the thermostat further. Any adjustments above these settings may waste energy.

If your heating system is a boiler with radiators, there will usually be only one programmable room thermostat to control the whole house.

But you can have different temperatures in individual rooms by installing thermostatic radiator valves (TRVs) on individual radiators.

If you don't have TRVs, you should choose a temperature that is reasonable for the whole house. If you do have TRVs, you can choose a slightly higher setting to make sure that even the coldest room is comfortable, then prevent any overheating in other rooms by adjusting the TRVs.

Programmable room thermostats need a free flow of air to sense the temperature, so they must not be covered by curtains or blocked by furniture. Nearby fires, televisions, wall or table lamps may prevent the thermostat from working properly.

### Digistat Optimising Programmer


The Digistat Optimising Programmer has factory set programs for ON/OFF periods for central heating which are described on the following pages.

These factory installed settings can be used without any further programming.

### Clock Setting

The Digistat Optimising Programmer is fitted with a real-time clock, which is pre-set at the factory. You will not have to set the time.

A special feature of this real-time clock is to automatically update the time during the summer/winter time change removing the need to manually alter the clock.

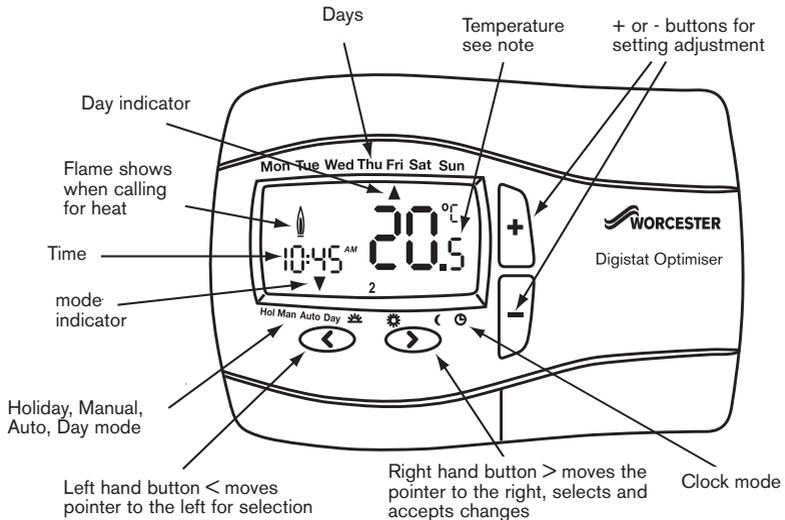

**NOTE:** The temperature displayed is actual room temperature unless adjusting the + or - button when the set temperature is displayed. Once adjustment is complete and after a 5 second delay the display will return to the actual room temperature.

### General Operation

With the unit in Auto mode (the small arrow to bottom of screen will point to Auto) the temperature can be changed for a short time by using the + or - buttons. Changing the temperature in this way will keep the Programmer set to your new temperature until the next pre-programmed event (at which time it will revert to programmed temperature). The temperature you are setting will flash on the screen. Once temperature is set, the unit will revert to showing the current temperature. The flame indicator will show on the screen if the heating is turned on.

### The Digistat Optimising Programmer

This is a 5-2 Day / 7 Day programmable thermostat product. 5-2 day allows you to set a program for weekdays and a program for the weekend. Full 7-day functionality allows you to set a different program for every day of the week. Each program type allows you to set 6 time and temperature events.

#### Pre-set Program 1

The following default settings are pre-programmed for your convenience:

Event	1	2	3	4	5	6
Time	06:30	08:30	12:00	14:00	16:30	22:30
Temp.	20	16	16	16	21	7

#### Monday - Friday

As shown, at 06:30, the heating will come on to raise the temperature to 20°C. At 08:30, the temperature set point is dropped from 20°C down to 16°C, it stays at 16°C throughout the day, until 16:30 when the temperature increases to 21°C. The temperature then drops down to a night-setback temperature of 7°C until 06:30 when the cycle repeats for the next day. (Monday to Friday) For changes to weekend setting see below.




Event	1	2	3	4	5	6
Time	7:00	9:00	12:00	14:00	16:00	23:30
Temp.	20	18	21	18	21	7

#### Saturday - Sunday



As shown, at 07:00, the heating will come on to raise the temperature to 20°C. At 09:00, the temperature set point is dropped from 20°C down to 18°C, it stays at 18°C until 12:00 when the heating comes on to raise the temperature to 21°C. The temperature stays at 21°C until 14:00 when it drops down to 18°C.

At 16:30 the heating comes on to raise the temperature to 21°C where it stays until 23:00 when the temperature then drops down to a night-setback temperature of 7°C until 07:00 when the cycle repeats for the next day. (Saturday and Sunday) or changes to weekday settings see above.

PROGRAMMABLE SETTINGS  
 ADJUSTING TIMES & TEMPERATURES

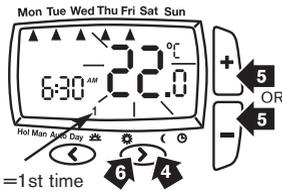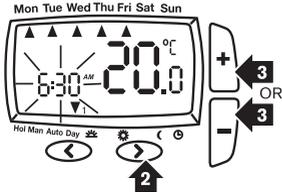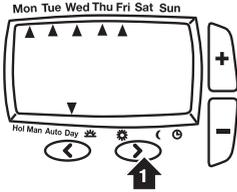

1=1st time period

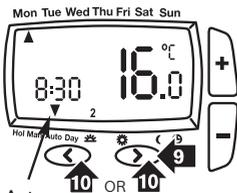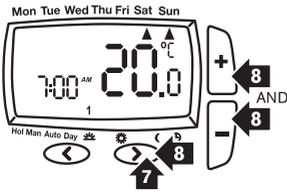

Auto mode indicator

**Digistat Optimising Programmer - 5-2 Day operation:**

1. With the product operating as normal in Auto mode press > once.

The display will flash the Monday to Friday day indicators.

2. Press > once, the display will be as shown. The time will be flashing.

3. Use + or - buttons to adjust 1st time as required.

4. When the time has been set, press >. The temperature display will be flashing

5. Use + or - buttons to adjust required temperature.

6. Press > to confirm and move to next time and temperature periods to be adjusted confirm changes by pressing > button. (max 6 time periods).

**NOTE:** The small 1 in lower half of screen shows time period being set. e.g. 1=1st period, 2 = 2nd period etc.

7. When the last weekday temperature has been set press > once to confirm and allow adjustment of the weekend program.


8. Use + and - buttons and > button to set the 6 periods for the weekend program.

9. When the final temperature has been set press > to confirm.


10. To exit press < or > until you return to auto mode with bottom arrow pointing at Auto.

**To change temperature for a short period (Override):**

1. Press + or - buttons to adjust set temperature.  
Set temperature flashing as shown.

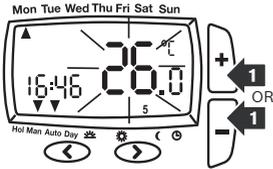


2. After 5 seconds the Digistat will start controlling at selected set point but displays actual room temperature.  
Two chevrons indicates override mode.

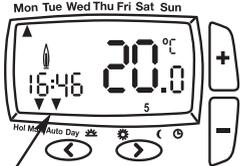

2 chevrons indicate override mode


3. To exit override press > once or wait until next change in the pre-set program (i.e. when period 5, in this case, becomes period 6).

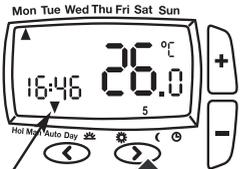


Reverts to 1 chevron

**To set a constant room temperature (Manual mode):**

1. Press < once, the display shows temperature flashing (e.g. 20°C).

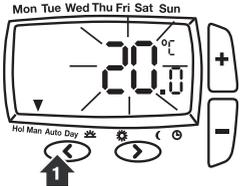


2. Press + or - buttons to adjust the temperature as required.  
The temperature will stop flashing after 5 seconds and start controlling at this temperature.

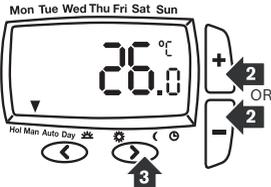


3. Press > once, to return to auto mode.

**Digistat Optimising Programmer - 7-Day operation:**

1. With the product operating as normal in Auto mode press > once.
2. Press + button until the display is flashing as shown.

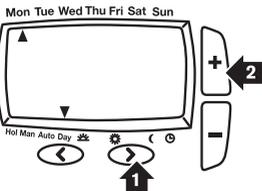


**PROGRAMMABLE SETTINGS**  
**ADJUSTING TIMES & TEMPERATURES**

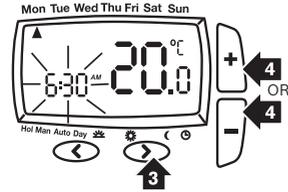

3. Press > once, the display will be as shown. The time will be flashing.


4. Use + or - buttons to adjust 1st time as required.

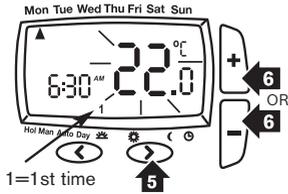

5. When the time has been set, press >.


6. Use + or - buttons to adjust required temperature (shown flashing).

Repeat above steps 3-6 until the 6 periods have been set for Monday. The small 1 in lower half of screen shows time period is being set. e.g. 1=1st period, 2 = 2nd period etc.

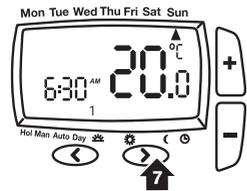

7. When Monday has been set.


Repeat steps 3-6 until all 7 days of the week have been set.

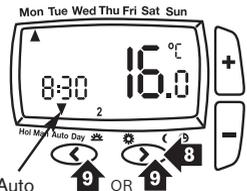

8. When the final temperature has been set press > to confirm settings.

9. To exit press < or > until you return to auto mode with the bottom arrow pointing at Auto.

Auto mode indicator

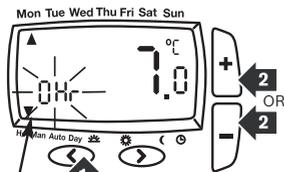


**To set holiday mode:**

1. Press < twice, the display shows time flashing.

Time periods between 1 to 23(Hr) hours and 1 to 199(d) days can be set.


2. Press + or - buttons to adjust the count down time as required.

Holiday x2 mode indicator

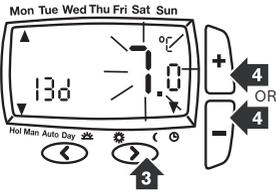


3. Press > once to confirm, the display will show temperature flashing.

4. Press + or - buttons to adjust temperature and press > to start holiday count down time.

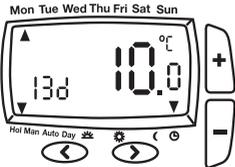

Alternatively after 10 seconds the temperature will stop flashing and holiday count down time will start.

Display shows count down time and ambient room temperature.

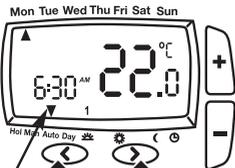


Auto mode indicator

5. To exit the holiday mode press the < or > once, to return to auto.

### To switch the thermostat OFF:

Press the + and - simultaneously for 5 seconds until the OFF is displayed. The thermostat and heating system will now be OFF unless the temperature in the controlled space falls below 7°C, the frost protection set point.

Please note this does not affect the operation of the domestic hot water where provided. To switch ON the thermostat, press any key to return to auto mode.

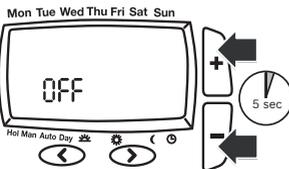

### User Options


User Options (shown in table on page 10) can be accessed from Auto or Man by pressing < and > simultaneously for 3 seconds.


When you have accessed the User Options Menu **press > to scroll through selectable options.**

The settings for each option can be changed by **pressing + or -** as required.

**Pressing > accepts the change** and moves to the next option.

**NOTE: To exit User Options press < and > simultaneously for 3 seconds.**

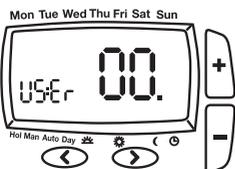

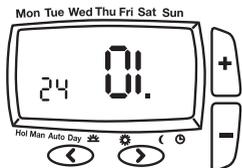


Alternatively, not pressing any buttons for 2 minutes will cause the Programmer to return to Auto.

This figure opposite shows option "01 24" (24 hour clock).

Only options that have been accepted by pressing > will be changed.


Option	Description of Option	Min	Max	Default
01	Change clock 12h/24h	12	24	24
02	Change pre-set program	1	3	1
03	Change number of program events per day	2,4 or 6		6
04	Switch on/off Daylight Savings Time change	On	Off	On
05	Adjust date and time	Factory set		
06	Change temperature offset °C	-5	5	0
07	Restore pre-set program	On	Off	Off
08	Disable OFF function	On	Off	On
09	Access protection lock	On	Off	Off

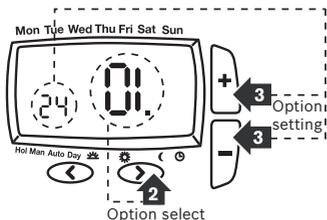

#### Option 01 Change from 24hr to 12hr clock.

1. Enter user options by pressing < and > simultaneously for 3 seconds.
2. Select option 01 by pressing > until 01 appears.
3. Use + and - keys to select desired option setting, 12 = 12hr and 24 = 24hr.

Press > to accept change.

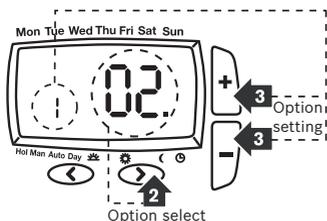

#### Option 02 Change to program 1, 2 or 3.

1. Enter user options by pressing < and > simultaneously for 3 seconds.
2. Select option 02 by pressing > until 02 appears.
3. Use + and - keys to select desired program 1, 2 or 3.  
1 = program 1, 2 = program 2, 3 = program 3

Press > to accept change.

Preset programs 2 and 3 are shown on page 10 and 11.

**Pre-set Program 2 (Home for lunch)  
Monday to Friday**

Event	1	2	3	4	5	6
Time	6:30	8:30	12:00	14:00	16:30	22:30
Temperature	21	16	21	16	21	10

At 06:30 the heating raises the temperature to 21°C. At 08:30, the temperature set point is dropped to 16°C, until 12:00 when the heating raises the temperature to 21°C. The temperature stays at 21°C until 14:00 when it drops to 16°C. At 16:30 the heating raises the temperature to 21°C where it stays until 22:30 when the temperature drops down to a night setback temperature of 10°C until 06:30 when the cycle repeats the next day.

**Saturday to Sunday**

Event	1	2	3	4	5	6
Time	7:00	9:00	12:00	14:00	16:30	23:00
Temperature	21	18	21	18	21	16

At 7:00, the heating raises the temperature to 21°C. At 9:00, the temperature set point is dropped to 18°C, it stays at 18°C until 12:00 when the heating raises the temperature to 21°C. The temperature stays at 21°C until 14:00 when it drops down to 18°C. At 16:30 the heating raises the temperature to 21°C where it stays until 23:00 when the temperature drops down to a night setback temperature of 10°C until 07:00 when the cycle repeats the next day.

**Pre-set Program 3 (Home Worker)  
Monday to Friday**

Event	1	2	3	4	5	6
Time	6:00	8:30	12:00	14:00	17:30	22:30
Temperature	21	19	21	19	21	16

As you can see, at 06:00, the heating will come on to raise the temperature to 21°C. At 08:30, the temperature set point is dropped to 19°C, it stays at 19°C until 12:00 when the heating comes on to raise the temperature to 21°C. The temperature stays at 21°C until 14:00 when it drops to 19°C. At 17:30 the heating comes on to raise the temperature to 21°C where it stays until 22:30 when the temperature drops down to a night setback temperature of 16°C until 06:00 when the cycle repeats the next day.

**Saturday to Sunday**


Event	1	2	3	4	5	6
Time	7:00	9:00	12:00	14:00	16:30	22:00
Temperature	21	18	21	18	21	16

As you can see, at 7:00, the heating will come on to raise the temperature to 21°C. At 9:00, the temperature set point is lowered to 18°C, it stays at 18°C until 12:00 when the heating comes on to raise the temperature to 21°C. The temperature stays at 21°C until 14:00 when it is lowered to 18°C. At 16:30 the heating comes on to raise the temperature to 21°C where it stays until 23:00 when the temperature is lowered to a night setback temperature of 16°C until 07:00 when the cycle repeats the next day.

**Option 03 How to change the number of program events per day.**

1. Enter user options by pressing < and > simultaneously for 3 seconds.
2. Select option 03 by pressing > until 03 appears.
3. Use + and - keys to select option. 2 = 2 time / temp events per day, 4 = 4 time / temp events per day, 6 = 6 time / temp events per day.


**Press > to accept change.**

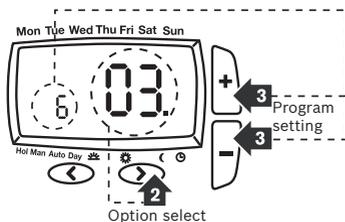**Option 04 How to switch on/off the automatic summer / winter time change.**

Twice a year the actual time is automatically changed to keep it in line with the summer / winter time change. **Default setting is On.** If you wish to disable / enable this feature:

1. Enter user options by pressing < and > simultaneously for 3 seconds.
2. Select option 04 by pressing > until 04 appears.
3. Press - or + key to display Off or On as desired.

**Press > to accept change.**

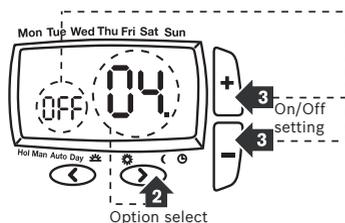

**Date and time setting.**

The DT10RF OPTIMISING PROGRAMMER comes with a pre-set clock, which also automatically adjusts for daylight saving time changes. It is activated automatically on 1st installation. There should be no need to change these settings, however, should you wish to, it can be done in Option 05.

**Option 05 How to adjust date and time.**

1. Enter user options by pressing < and > simultaneously for 3 seconds.

2. Select option 05 by pressing > until 05 appears.

3. To access the year press > once and the year selection is displayed.

Use the + or - key to select the required year and press > to accept the change.

The month selection is now displayed.

4. Use the + or - key to select the required month and press > to accept the change.






The day selection is now displayed.





5. Use the + or - key to select the required day and press > to accept the change.

The time selection is now displayed.

6. Use the + or - key to select the required time and press > to accept the change.

Option 6 is now displayed.

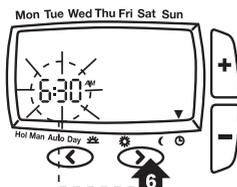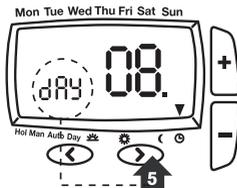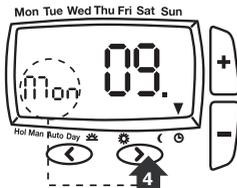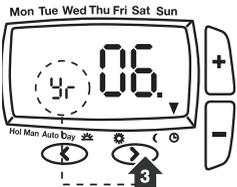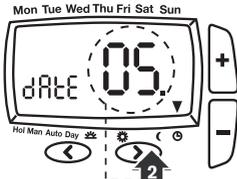

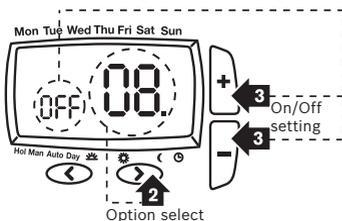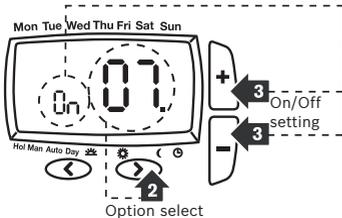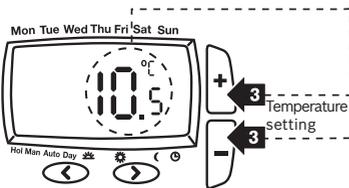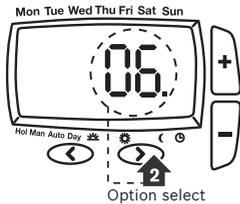

**NOTE:** Option 5 must be completed or at least “stepped through” using the > key before option 6 can be accessed

### Option 06 How to change temperature offset.

The temperature displayed on the thermostat may not match that of other temperature measuring devices in the controlled space, because of its location.

The displayed temperature may be offset to bring it in line with other devices.

1. To adjust the temperature, enter the user options by pressing < and > simultaneously for 3 seconds.
2. Select option 06 by pressing > until 06 appears.
3. The temperature may be offset by +/- 5 degrees by pressing the + and - keys.

**Press > to accept the desired change.**

### Option 07 How to restore the built in time temperature programs.

**NOTE:** Switching this option on will delete any user changes to the preset programs.

1. Enter the user options by pressing < and > simultaneously for 3 seconds.
2. Select option 07 by pressing > until 07 appears.
3. Use + and - keys to select desired option.
  - Off = current programs retained.
  - On = restore factory program settings.

**Press > to select the desired change.**

The option 07 display automatically reverts back to off.


### Option 08 How to disable the OFF function.

1. To disable the Off function, enter user options by pressing < and > simultaneously for 3 seconds.
2. Select option 08 by pressing > until 08 appears.
3. Use + or - keys to select Off.

**Press > to accept change.**

It is now not possible to switch the Digistat Off using the + and - keys as previously described.

To enable the Off function return to option 08 and select On. Press > to accept change.

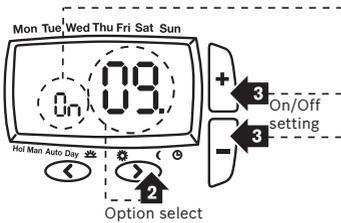

### Option 09 How to lock the key pad - Access Protection Lock.

The access protection lock allows you to lock the Digistat Optimiser so that it cannot have any adjustments.

The default is Off mode allowing you to adjust the Digistat.

1. To Lock the Digistat settings enter the user options by pressing < and > simultaneously for 3 seconds.
2. Select option 09 by pressing > until 09 appears.
3. Use + or - keys to select On.

**Press > to accept.**


**Once the User Options Menu is exited all buttons will be locked.**

4. To switch off the Protection Lock enter the user options by pressing < and > simultaneously for 3 seconds.
5. Change to Off.

**Press > to accept.**

**Once the User Menu is exited all buttons will be free to adjust.**

**NOTE: To exit User Options press < and > simultaneously for 3 seconds.**

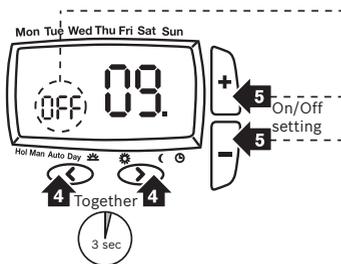

### Special Note:

The following only applies when the Intelligent delayed start feature is enabled.

#### Ask your installer for details

When the delay period is operating indicated by the flame symbol flashing, pressing any button returns the DT10RF OPTIMISING PROGRAMMER to auto mode allowing normal button operation until the next time/temperature event, when it will resume the delay start mode or follows the Holiday, Manual, Override or Off modes as selected.

Changes to the installer options and pre-set programmes must be made with the flame symbol not flashing

### What is Intelligent delayed start.

The Intelligent Delayed Start is an energy saving feature which automatically reduces the warm up time for the heating system.

As the weather becomes milder, Intelligent Start will delay the heating start times so that the fuel is not wasted bringing the room up to temperature earlier than necessary.

**NOTE:** See page 31 for further information and set up details.

# DT10RF RECEIVER

## OPERATING CONTROLS

### DT10RF Receiver Programmer

The Programmer has factory set programs for ON/OFF periods for hot water pre-heat, which are described on the following pages.

These factory installed settings can be used without any further programming.


This section also details how to program the DT10RF Receiver with new weekday and weekend times to suit your lifestyle requirements.

How to set the clock, time and date, is also given, but should not require adjustment as these are factory set.

A holiday function is also provided, where you can set the number of days that you are away on holiday.

The boiler will provide frost protection for those number of days.

After that set number of days the boiler will revert to the normal operating program, ready for your return from holiday.

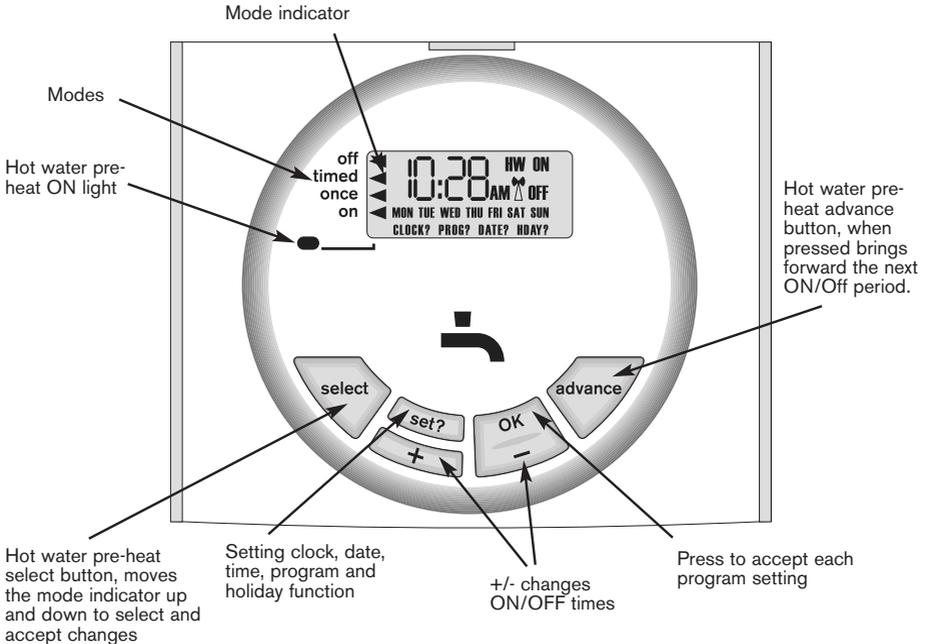

# DT10RF RECEIVER

## OPERATING CONTROLS



### Hot Water:

1. Press **select** button to choose

- ▶ **off** = constantly OFF
- ▶ **timed** = up to 3 ON and 3 OFF time periods as programmed
- ▶ **once** = ON from first ON until third OFF time period as programmed

See table overleaf for details of program

- ▶ **on** = constantly ON

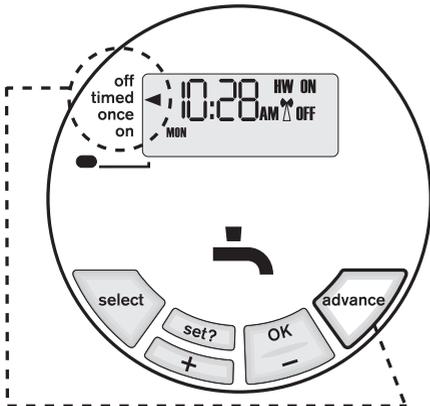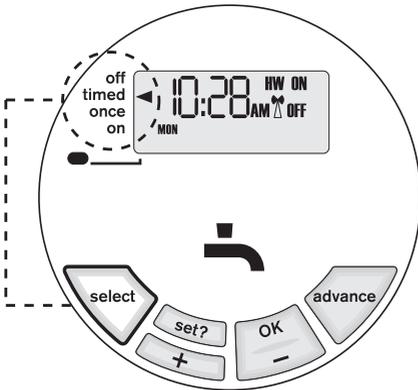


2. Press "**advance**" button:

ON = hot water pre-heat light on  
(hot water pre-heat stays on until next off time period)

OFF = hot water pre-heat light off  
(hot water pre-heat stays off until next on time period)

**DT10RF RECEIVER**  
**PRE-SET PROGRAMS**

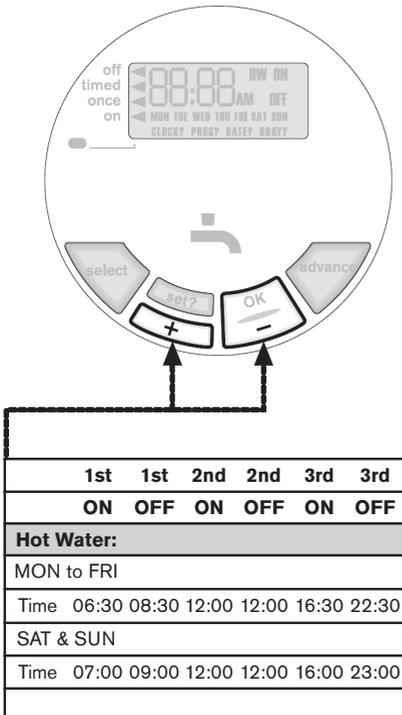

**NOTE:** The ON/OFF periods pre-programmed for Hot Water pre-heat are shown in the table opposite.

The factory installed settings can be used without any further programming of the receiver.

The date and time are pre-programmed and should not require adjustment.

**If you need to restore the factory pre-set program times then:**

Press the + and - buttons together, for at least 3 seconds, to restore the default program times.

**NOTE:** Two ON/OFF periods can be used instead of three, by setting the second ON/OFF periods to 12:00 as shown in the default program table.

One ON/OFF period can be achieved by setting the second and third ON/OFF periods to the same time.

See RECEIVER PROGRAMMABLE SETTINGS if changes are required to the clock time or pre-programmed settings.

**SETTING MON - FRI**

1. Press **set?** until SET and PROG? are shown in the display. Press OK to select PROG to continue with programming.

2. Press **OK** to select MON-FRI.

3. Press **OK** to select ON time.

**NOTE:** Speed up the display by holding down the + or - buttons.

4. Press + or - to change the ON time.


5. Press **set?** to set the ON time and select the OFF time.

6. Press + or - to change the OFF time.



7. Press **set?** to set the OFF time and select the next ON time.

Repeat operations 4 to 7 to set the second and third ON/OFF times.

**NOTE:** After pressing **set?** for the third hot water pre-heat OFF time the display shows SET MON ...see next page

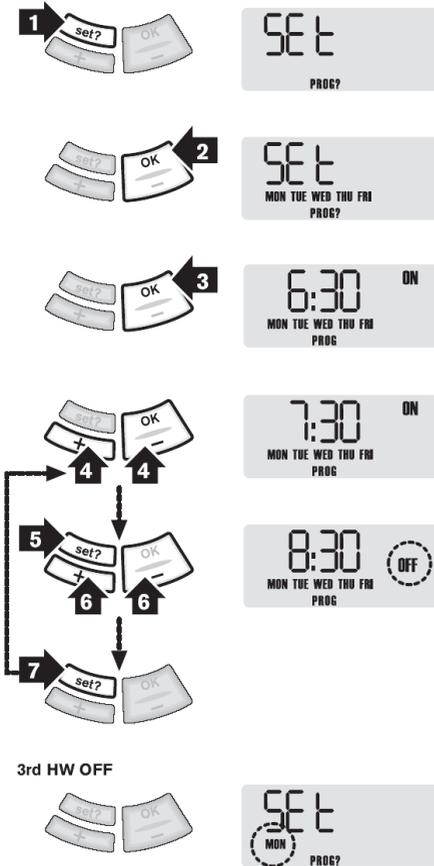

DT10RF RECEIVER  
PROGRAMMABLE SETTINGS

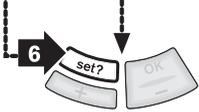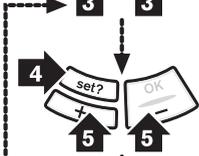

**Setting individual weekdays:**

**NOTE:** If you do not require individual weekday times, then press **set?** until SET SAT-SUN is displayed and continue on the next page.

If you do not wish to change the setting for the day displayed, then press **set?** until the first day you want to change is displayed.

1. Press OK to select weekday.

2. Press OK to select first ON time.

**NOTE:** Speed up the display by holding down the + or - buttons.

3. Press + or - to change the ON time.

4. Press **set?** to set the ON time and select the OFF time.

5. Press + or - to change the OFF time.

6. Press **set?** to set the OFF time and select the next ON time.


Repeat operations 3 to 6 to set the second and third ON/OFF times.

3rd HW OFF



**NOTE:** After pressing **set?** for the third OFF time, SET and the next weekday are displayed after completing the steps above for FRI the display shows SET SAT-SUN.

see next page....

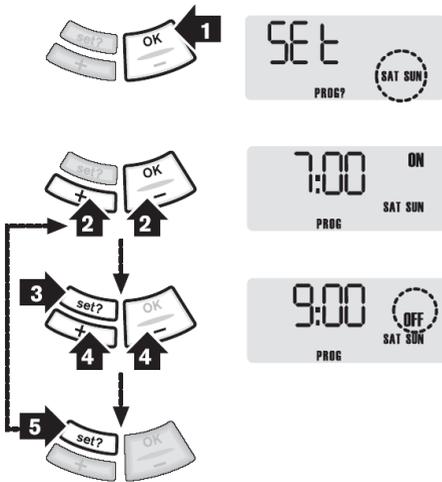

### Setting SAT - SUN:

1. Press OK to select weekend.

**NOTE:** Speed up the display by holding down the + or - buttons.

2. Press + or - to change the ON time.

3. Press **set?** to set the ON time and select the OFF time.


4. Press + or - to change the OFF time.

5. Press **set?** to set the OFF time and select the next ON time.

Repeat operations 2 to 5 to set the second and third ON/OFF times.

**NOTE:** After pressing **set?** for the third OFF time, SET SAT are displayed....

If you do not require individual weekend times, then press **set?** until the normal display is resumed.

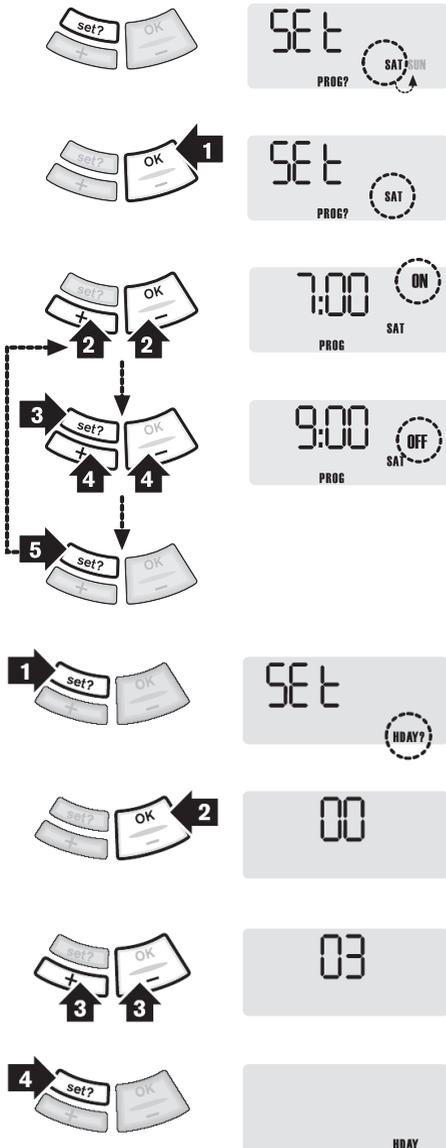

**Setting individual weekend days:**

**NOTE:** If you do not require individual weekend times, then press **set?** until the normal display is shown.

If you do not wish to change the setting for SAT, then press **set?** until the normal display is shown.

1. Press OK to select the day displayed.

**NOTE:** Speed up the display by holding down the + or - buttons.

2. Press + or - to change the ON time.

3. Press **set?** to set the ON time and select the OFF time.

4. Press + or - to change the OFF time.

5. Press **set?** to set the OFF time and select the next ON time.

Repeat operations 2 to 5 to set the second and third ON/OFF times.

**NOTE:** After pressing **set?** for the third hot water pre-heat off time for SAT, the display will show SET SUN. Press OK to set SUN or press **set?** until the display returns to normal mode.

**Holiday settings**

1. Press the **set?** button until SET and HDAY are displayed.

2. Press OK, the display shows 00.

3. Press + or - to set the number of days you require the system to be off.

4. Press **set?** then HDAY is shown in the display and no demand for heating will be made from the programmer. The programmer will return to normal after the set number of days.

To cancel the Holiday setting and return to normal operation, press any button.

**NOTE:** The programmer counts each pass through midnight as a day.

For example, if you did not want heating from Saturday morning until Tuesday morning, set for three days.


### Setting the clock and time



1. Press the **set?** button until SET and CLOCK are displayed.



2. Press OK.

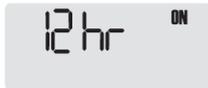

3. Press + to switch between 24hr and 12hr display.



4. Press **set?** to set the clock and the hours display flashes.



5. Press + or - to set the correct hour.

**NOTE:** Speed up the display by holding down the + or - buttons.



6. Press the **set?** button to accept the correct hour and minutes display flashes.



7. Press + or - to set the correct minutes.



8. Press the **set?** button to accept the correct minutes. Now SET and DATE will be displayed.

**NOTE:** If the day displayed is incorrect the date needs resetting. To change the date, refer to **SETTING THE DATE** on the next page. If you do not wish to change the date, press **set?** to return to the normal display.

DT10RF RECEIVER  
PROGRAMMABLE SETTINGS

**Setting the date**

**NOTE:** If the day displayed is incorrect, the date needs resetting as follows:

1. Press the **set?** button until SET and DATE are displayed.

2. Press the OK button once, the year will flash on the display.

3. Press + or - to correct the year.

4. Press the **set?** button and the month will flash on the display.

5. Press + or - to correct the month.

6. Press the **set?** button and the day will flash on the display.



7. Press + or - to correct the day.




8. Press the **set?** button, the DLS and ON will flash on the display.

9. Press + or - to set for ON or OFF

10. Press **set?** twice to return to the normal display.

**NOTE:** DLS = Day Light Saving time

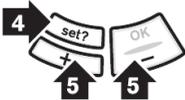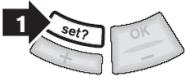

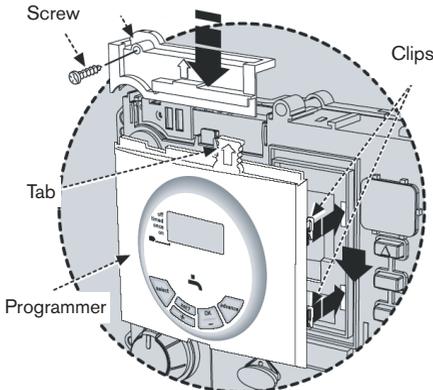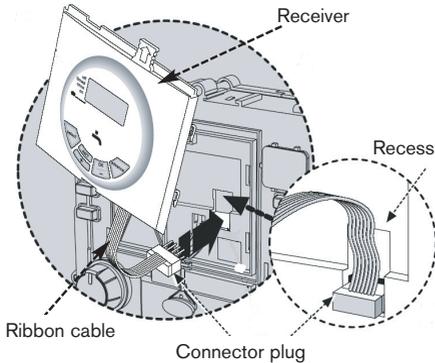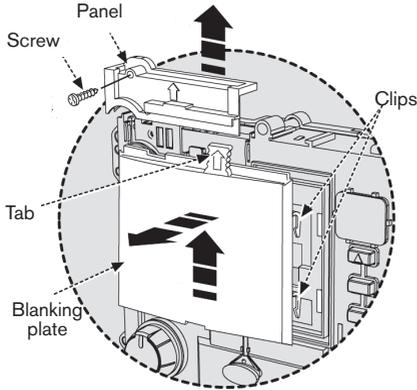

**DANGER: 230 VOLTS  
DO NOT TOUCH THE  
ELECTRICAL COMPONENTS  
OR CIRCUITS**

**CAUTION:  
ISOLATE THE MAINS ELECTRICITY  
SUPPLY BEFORE STARTING ANY  
WORK AND OBSERVE ALL RELEVANT  
SAFETY PRECAUTIONS**

**OBSERVE ELECTRO-STATIC  
DISCHARGE PRECAUTIONS.  
DO NOT TOUCH THE PCB CIRCUIT**

**NOTE: THIS ACCESSORY MUST BE FITTED  
BY A COMPETENT PERSON.  
FAILURE TO COMPLY COULD LEAD  
TO PROSECUTION.**

1. Remove the boiler outer casing and control panel fascia to gain access to the heatronic control panel.  
Release the securing screws.  
Pull the cover panel upwards to remove.  
Grip the tab and pull upwards to disengage clips, pull forward to remove blanking plate or existing programmer.
2. Align connector pins into the sockets on the PCB and push fully home.  
Feed the ribbon cable into the recess.
3. Align the programmer and locate the clips, push into the slots then downwards to secure. Locate the cover panel in place and secure with the screw.  
Replace fascia cover and outer casing before switching on the electrical supply and boiler.  
Switch boiler on when completed.  
Refer to the User Instructions section for details of pre-set and setting programs.



**Receiver set up:**

After initial start up, the colon, CH and antenna symbols should be flashing on the display.

1. Press the set? button 4 times
2. Press the OK button once
3. Press the set? button 4 times; Lrn and OFF should be displayed
4. Press the + button so the display shows ON and a flashing antenna symbol. The learn mode is now ready to receive a signal from the transmitter during the next two minutes.

**Transmitter set up:**


1. Take the Digistat Programmer unit and stand near the boiler.
2. Remove the battery cover and fit the batteries.

**Transmitter battery compartment**



**How to fit the batteries**

Remove the battery cover using a coin. Insert 2 x 1.5V (AA) Alkaline batteries ensuring correct orientation. Replace the battery cover pressing fully home.

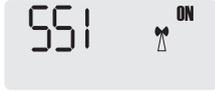


3. The symbols on the receiver will stop flashing and the display will show 'SSI, Antenna and ON'.



4. Press 'SET' and the display will show 'SSI and Antenna'.




5. After a few seconds the display will show '- - -'.

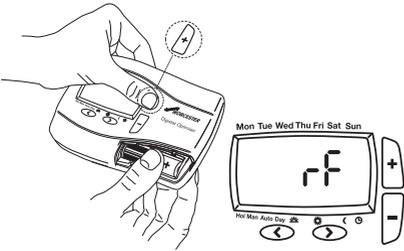

6. Remove the batteries from the transmitter and wait for the display to fade. Press and hold the '+' button while re-inserting the batteries and keep the button depressed until the display shows 'rF'. The transmitter is now in constant transmission mode enabling it to be correctly positioned within the home.

7. The receiver display will now show the 'learnt' transmitter code and the antenna as well as the signal strength as indicated by the chevrons on the right hand side of the display.

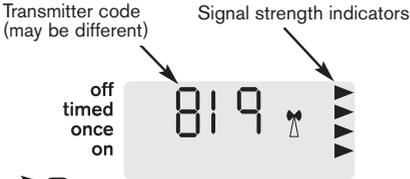

8. Place the transmitter in the desired final position and return to the boiler to check the receiver display. The ideal transmitter position will result in the receiver display showing 4 chevrons and the LED will be green.

For siting advice refer to "Positioning RF room thermostat on page 28.




9. If the LED is red or no LED is showing and the display indicates 1 or 2 chevrons, the transmitter will need to be re-positioned until the LED changes to amber or green and 3 or 4 chevrons are indicated on the display.

**NOTE:** If there is no LED and the display shows '- - -', there is no signal being received at all from the transmitter. Transmission will resume once the transmitter is re-positioned in a part of the house where an amber or green LED and 3 or 4 chevrons are achieved.

LED indicator shows different colour depending on signal strength (see table below)

LED Indication	Chevrons	RF Strength
Green	4	Very strong
Amber	3	Strong
Red	2	Weak
None	1	Very weak

10. Once you are happy that, when in the desired location, the transmitter is sending a good signal to the receiver i.e. amber or green and 3 or 4 chevrons, the transmitter can be fixed to the wall.

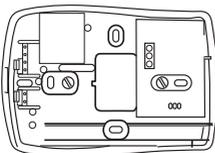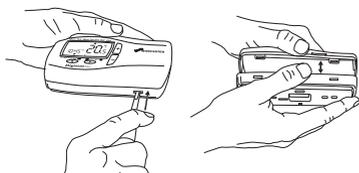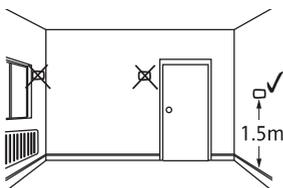

### To cancel signal strength mode:

1. Remove the batteries from the transmitter to cancel the constant transmission.
2. After a few seconds the receiver display will show '---'.
3. Press 'OK' on the receiver display and the display will return to the time with the 'CH and Antenna' flashing.
4. Re-insert the batteries into the transmitter and the RF link will be re-established.

### Positioning RF room thermostats



The Digistat is a radio frequency device which is very flexible for positioning as there is no need for hard wiring to the appliance. The device should be mounted in a open area, no closer than 30cm from metal objects, including wall boxes.

Mount the Digistat on a wall which is not subject to direct sunlight or draughts, preferably on an inside wall, 1.5 metres above the floor. The Digistat must also not be directly influenced by radiators or other appliances giving off heat.

### Mounting the digistat

1. Remove the front cover using a flat screwdriver and separate from back plate.
2. Fix the back plate directly onto the wall using suitable wall plugs and screws.


TO CHECK PREVIOUSLY  
INSTALLED UNIT

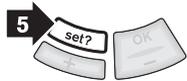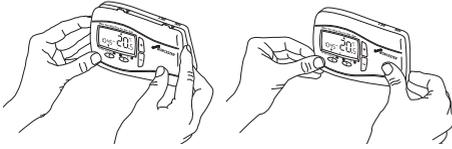

3. Replace the front cover by locating in position and pushing fully onto the back cover.

**To check signal strength on previously installed and paired units :**

1. Press the 'set' button 4 times.
2. Press 'OK' once.
3. Press the 'set' button 5 times. The display will show 'SSI and OFF'.
4. Press the '+' button so that the display shows 'SSI, Antenna and ON'.
5. Press the 'set' button so the display shows 'SSI and Antenna'.
6. After a few seconds the display will show '---'.
7. Remove the batteries from the transmitter and wait until the display has faded away.

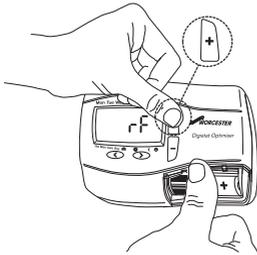

8. Press and hold the '+' button on the transmitter while re-inserting the batteries and keep the button depressed until the display shows 'rF' .

Transmitter code  
(may be different)

Signal strength indicators



LED indicator shows different colour depending on signal strength (see table right)

9. Check the receiver LED and chevrons to determine the signal strength now being received.

LED Indication	Chevrons	RF Strength
Green	4	Very strong
Amber	3	Strong
Red	2	Weak
None	1	Very weak



**To cancel signal strength mode:**

1. Remove the batteries from the transmitter to cancel the constant transmission.




2. After a few seconds the receiver display will show '---'.



3. Press 'OK' on the receiver display and the display will return to the time with the 'CH and Antenna' flashing.





4. Re-insert the batteries into the transmitter and the RF link will be re-established.

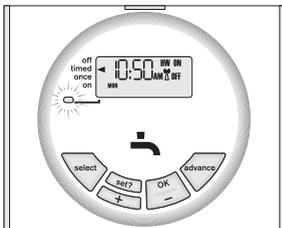

**During normal operation**

The LED on the receiver will flash red, approximately every 5 minutes. This denotes that a radio signal is being received from the transmitter.

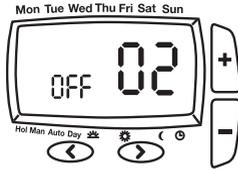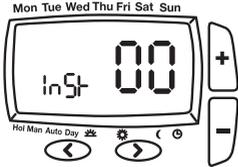

### Installer Options

1. If you wish to change any of the Installer Options as shown in the table below, enter the Installer Option Menu from Auto mode by pressing: **< and + simultaneously for 5 seconds.**

**Pressing < and + again for 5 seconds will exit the Menu and return to Auto mode.**

Once the Installer Options screen has been selected, the **< and > buttons allow you to scroll through the Menu** (shown below). The **+ and - allow you to change values.**

Once a value has been changed **pressing > before exiting the Menu will save the new setting.** (The figure shows Option 02 OFF).

Installer Options	Function	Select Option		Default
		On	Off	
02	Freeze protection	On	Off	On

### Option 02 - Freeze Protection

Freeze protection will switch on the heating if the room temperature falls to 5°C and will then control the temperature at 7°C even if the Digistat is in OFF mode.

**The Freeze Protection default is ON.**

To switch off the Freeze Protection mode enter the Installer Options Menu (Refer to Installer Options 02) and change to OFF. **Press > to accept.**

Installer Options	Function	Select Option		Default
		High Limit	Low Limit	
04	Low Set Point C	5	High Limit	5
05	High Set Point C	Low Limit	32	32

### Option 04 & 05 - Low and High Limit set points.

The user temperature set points defaults are High 32°C and Low 5°C, to change these limits enter the Installer Options Menu (Refer to Installer Options 04 & 05).

Installer Options	Function	Select Option		Default
		On	Off	
06	Delayed Start (Energy saving feature)	On	Off	Off


### Option 06 - Intelligent Delayed Start (Energy saving feature).

The Intelligent Delayed Start is an energy saving feature which automatically reduces the warm up time for the heating system.

If enabled, the start time should be set an hour earlier than the time you want the property to reach the set temperature.

Intelligent Start will delay that start time, by an amount that it has calculated based on the actual and set temperature.

As the weather becomes milder, the start time is delayed, so that fuel is not wasted bringing the room up to temperature earlier than necessary.

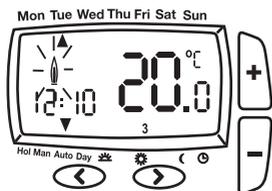

The Digistat calculates approximately 10 minutes to raise the temperature by 1°C, up to a maximum of 6°C.

**Note:**

Intelligent Delayed Start only applies in **Auto mode**.  
 Intelligent Delayed Start default is in **OFF mode**.  
 To switch ON Intelligent Delayed Start enter the Installer Options Menu (see Installer Options 06).

**Note:**

The Intelligent Delayed start option is not suitable for underfloor application.  
 Ensure Installer option 06 is set to OFF before final commissioning for underfloor application.

**Special Note:**

**If the Intelligent delayed start feature is enabled, (Off changed to On in Installer option 06), please inform the end user of this feature.**

**The following special note has been added to the user instruction to explain the adjustment requirement:**

When the delay period is operating indicated by the flame symbol flashing, pressing any button returns the Digistat to auto mode allowing normal button operation until the next time/ temperature event, when it will resume the delay start mode or follows the Holiday, Manual, Override or Off modes as selected.

Changes to the installer options and pre-set programmes must be made with the flame symbol not flashing.

Installer Options	Function	Select Option	Default
10	System protection	On Off	Off

**Option 10 - System Protection**

In some heating systems there may be a requirement to protect the system by operating it once a day, for a given period.

If system protection is selected the system will be operated for a period as shown in system protection time (mins).

System protection time is every day at 10.00am.  
 System protection default is OFF.




To enable the system protection mode enter the Installer Options Menu (Refer to Installer Option 10).

Installer Options	Function	Select Option	Default
11	System protection time (Mins)	1 5	3

**Option 11 - System Protection time (mins)**

System protection time can be set between 1 and 5 minutes (default 3 minutes).

To change this once a day on time enter the Installer Options Menu (Refer to Installer Option 11).

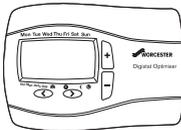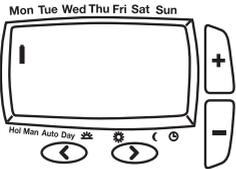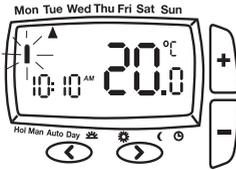

**Digistat Optimiser Programmer**  
Part number: 8 716 114 462 0



**DT10RF Receiver**  
Part Number: 8 716 106 667 0

### How do I know when to change the batteries.

When the batteries start to run low a battery icon will flash in the display, to indicate "low battery" during this time the Digistat will function normally.

### Replace with 2 x 1.5V (AA) Alkaline batteries.

When the battery icon alone is shown in the display, the batteries are completely exhausted and the Digistat will cease to function. Re-activate by replacing the batteries.

**The RF link will automatically be re-established.**

### How to replace the batteries

Remove the battery cover using a coin. Replace the spent batteries with 2 x 1.5V (AA) Alkaline batteries ensuring correct orientation. Replace the battery cover pressing fully home.

### Maintenance:

The Transmitter requires no maintenance.

The outer casing can be wiped clean using a dry cloth. **DO NOT** use polish or detergents.

These units can not be serviced.

Should the existing unit fail to function correctly, check:

- ▶ Receiver times and program settings are correct
- RF signal link is set up
- ▶ Transmitter batteries are the correct type, fitted correctly and are not exhausted.
- Fit new batteries if in doubt.

## CONTACT INFORMATION

---

### WORCESTER, BOSCH GROUP:

TECHNICAL: 08705 266241

SERVICE: 08457 256206

SPARES: 01905 752571

LITERATURE: 01905 752556

TRAINING: 01905 752526

SALES: 01905 752640

WEBSITE: [worcester-bosch.co.uk](http://worcester-bosch.co.uk)

WEBSITE (EIRE): [worcester-bosch.ie](http://worcester-bosch.ie)

Worcester, Bosch Group  
Cotswold Way, Warndon, Worcester WR4 9SW.  
Tel. 01905 754624 Fax. 01905 754619

[worcester-bosch.co.uk](http://worcester-bosch.co.uk)

Worcester, Bosch Group is a brand name of Bosch Thermotechnology Ltd.

8 716 115 494a (02.2009) 06515057001 ISSB

